



# Veneer Visual and Moisture Analyzer R7 - Peeling

## VISUAL AND MOISTURE OPTIMIZATION IN ONE INTELLIGENT SYSTEM



## Proper visual and moisture grading maximizes veneer quality

Accurate machine vision detects the dimensions and different types of defects on the veneer ribbon. Based on data, the analyzer optimizes clipping to achieve the best possible veneer recovery. At the same time, the analyzer grades the sheets to different grades according to the moisture content. Accurate grading leads to optimized drying and improved veneer quality by allowing optimized drying parameters for each grade.


Veneer Visual and Moisture Analyzer R7 (formerly known as Mecano VCO+MVA-G) offers different detection technologies to match your needs. You can select the imaging method of three available models: color, micro, or surface. Moisture analysis is based on microwave technology.



## Key benefits



**MAXIMIZE VENEER  
RECOVERY**

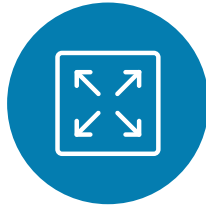

**PRODUCE MORE  
FULL-SIZE VENEER  
SHEETS**



**IMPROVE DRYING  
CAPACITY**




**MAXIMIZE VENEER  
QUALITY**




## Downloadable material



[Download  
PDF](#)

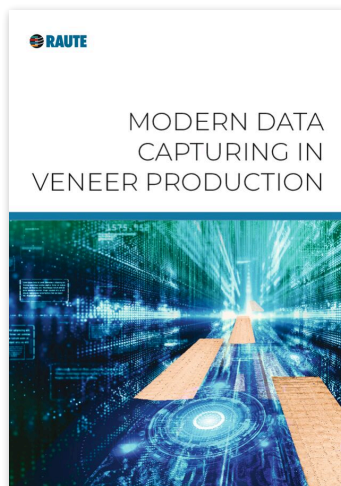

[Download  
PDF](#)

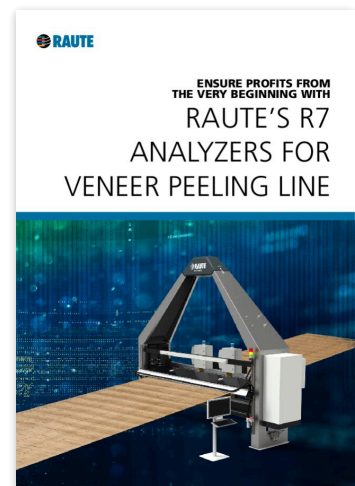

[Download  
PDF](#)

## Technical specifications

	Surface	Micro	Color
Veneer thickness (mm)	0.5 – 4.2	0.5 – 4.2	0.5 – 4.2
Available sizes (ft)	5 - 10	5 - 10	5 - 10
Grading accuracy	>95%	>95%	>95%
Color defects (e.g. Knot, wane)	●	●	●
Micro defects (e.g. Crack, pin hole)	●	●	●
Surface defects (e.g. Roughness, overlap)	●	●	●
Moisture Sensors (pcs)	5 - 10	5 - 10	5 - 10
Moisture Range (mc)	50% - 150%	50% - 150%	50% - 150%
Moisture Accuracy (mc)	±15%	±15%	±15%



# Analizers for Veneer Peeling

## Analizers make the most of your raw material starting at the peeling line

Veneer peeling is the first and one of the most influential phases in veneer production. The decisions made here define the efficiency, recovery, and quality of all downstream processes. That's why optimizing the peeling line begins with understanding the raw material and its features with the highest possible accuracy.

Intelligent analyzers measure multiple parameters to enhance peeling performance. Visual analyzers detect the best clipping point based on defects and veneer dimensions, moisture analyzers sort sheets into the correct moisture grades to maximize drying capacity, and centering analyzers optimize block alignment for the highest recovery. Some integrated solutions combine all these capabilities, even strength analysis, into a single compact system.

AI takes this optimization further. At the veneer peeling line, AI accurately detects challenging round-up defects such as bark, as well as defects suitable for patching. With extremely precise clipping and grading, AI helps improve raw material utilization and raise overall quality recovery before the sheets even reach the stacker. Instead of removing low-recovery veneer later at the core composer, mills can start making smarter decisions already at the first process step.

To support even more informed decisions, Raute analyzers also offer built-in patching, composing, and drying simulations. These tools let you evaluate how veneer will behave in later phases and ensure that only material suited for your production needs moves forward. For example, core composing simulations at the peeling line help you manage future recovery levels and control veneer inventory, improving mill-wide efficiency.

Take a look at our integrated analyzer solutions, which combine the features of two or even three analyzers, now including AI-enhanced defect detection and grading, into one compact system.



[raute.com](https://raute.com)

Making Wood Matter